

GERMANICA

DESIGNER TOASTER

GETO18CM



INSTRUCTION MANUAL

Please read this manual carefully before using, and keep it for future reference.

CONTENTS

General Safety	4
Product Overview	9
Preparation for Use	10
Operation	11
Toasting Notes	13
Cleaning & Maintenance	14
Specifications	15
Customer Helpline	Last Page

GENERAL SAFETY

IMPORTANT INFORMATION

Read this manual thoroughly before you start using the product.

The safety precautions instructions reduces the risk of fire, electric shock and injury when correctly complied to.

Please follow all instructions and take notice of all warnings.



This unit must be serviced by a qualified service personnel only.



The lightning flash with symbol within the triangle is intended to warn you of a non-insulated dangerous voltage in the product's enclosure that could be of sufficient magnitude to generate a risk of electric shock to persons.



The exclamation point within the triangle is intended to warn you to the presence of important operating and maintenance instructions in the documents included with the product.

IMPORTANT INFORMATION

The lightning flash symbol within the triangle is intended to warn you of non-insulated dangerous voltage the product's enclosure that could be of sufficient magnitude to generate a risk of electric shock to persons.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

GENERAL SAFETY (Cont.)

- This appliance is intended for private household use only.
It is not intended for commercial/industrial or trade use. Do not use it outdoors.
- Do not use this toaster for anything other than its intended purpose, and only use it as described in this manual. Any other use is not recommended and may cause fire, electric shock or injury.
- Misuse of the appliance may result in potential injury, risk of fire and/or electric shock. We accept no liability for any eventual damages or injury misuse of the product or noncompliance with the instructions.
- When using the toaster, it must be on a stable, secure, dry and level surface, out of children's reach, to prevent damage or injury.
- DO NOT operate the toaster under the following conditions:
 - * In a damp place or in areas with high humidity (such as in a bathroom)
 - * On or near a hot cooktop, in a heated oven, or near an open flame.
 - * On a metal tray.
 - * In confined spaces or under overhanging furniture/structures.
- The use of accessory attachments not recommended in this manual may cause electric shock, fire or personal injuries.
- **WARNING:** Do not put anything else (such as oversized food, metal foil packages or utensils) into the toasting slots. Doing so may create a fire or electric shock hazard.
- **Crumb tray:** To avoid the risk of fire, remove crumbs from the crumb tray after each use. Pull the crumb tray out completely, discard the crumbs and wipe it clean with a dry or damp cloth. Make sure the tray is dry and properly in place before reuse.

GENERAL SAFETY (Cont.)

- Do not leave the toaster unattended when the power is turned on.
- Ensure the toaster is switched off before removing it from the base.
Do not move the appliance while it is switched on.
- Always unplug the toaster from the outlet when it is not in use. To disconnect, turn off the power at the outlet, then remove the plug from the wall. Grip the plug when disconnecting, do not pull the cord.
- **CAUTION:** Unplug the toaster and allow it to cool before cleaning and maintenance. To prevent damage to the appliance, do not use abrasive or alkaline cleaning agents when cleaning. Use a soft cloth and a mild detergent.

GENERAL SAFETY (Cont.)

CAUTION: HOT!

- Do not touch any part of the toaster housing when it is in use. The surfaces get hot. Only touch the handle. Do not put any part of your hand or body near the toaster when it is turned on.
- Take care when handling the toaster after use.
- **WARNING:** Do not place your hand inside the toaster while in use. Wait for the toaster to complete toast and push up the bread for it to then be easily removed.
- The toaster heats up and can cause burns. The temperature of accessible surfaces, especially the toaster's metal parts, can become very hot when the appliance is operating. Do not touch hot surfaces during or immediately after use. Use handles or knobs.
- Always use oven mitts when handling hot material and allow metal parts to cool before cleaning.
- Take care when taking out hot bread slices after toasting to avoid injuries.
- The product are not intended to be operated by means of an external timer or separate remote-control system.
- Bread may burn. Therefore toasters must not be used near or below curtains and other combustible materials. They must be watched.

GENERAL SAFETY (Cont.)

ELECTRICAL SAFETY AND POWER CORD HANDLING

- Before connecting the toaster to the power supply, make sure your outlet voltage and circuit frequency correspond to the voltage indicated on the appliance rating label and your outlet socket is properly earthed. If this is not the case, do not use the toaster.
- Do not use any other appliance at the same time on the same electrical circuit as it may overload the circuit and blow the fuse or breaker.
- To protect against fire and electric shock, do not immerse the cord, plug, power base or the toaster itself in water or other liquid. Do not expose the electrical connections to water.
- Only use the toaster with the power base provided. Do not use the power base to power any appliance other than this kettle.
- Avoid spillage on the connector.
- Do not kink, bend, squash, strain or damage the power cord and protect it from sharp edges and heat. Do not let the cord hang over the edge of a table or benchtop. Do not let it touch hot surfaces. The cord should be run in such a way that there will be no risk of anyone pulling it inadvertently.
- Do not use an extension cord with this toaster.
- Do not pick up or operate the appliance if the power supply cord, plug, power base or toaster housing is damaged, or after it malfunctions or has been damaged in any manner.
- A damaged cord or plug must be replaced by the manufacturer or a qualified person in order to avoid a hazard. In case of damage, contact our after sales support centre for advice.


This appliances is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments
- farm houses
- by clients in hotels, motels and other residential type environments
- bed and breakfast type environments

The appliance must not be immersed.

CAUTION: Do not operate the toaster on an inclined plane.

PRODUCT OVERVIEW

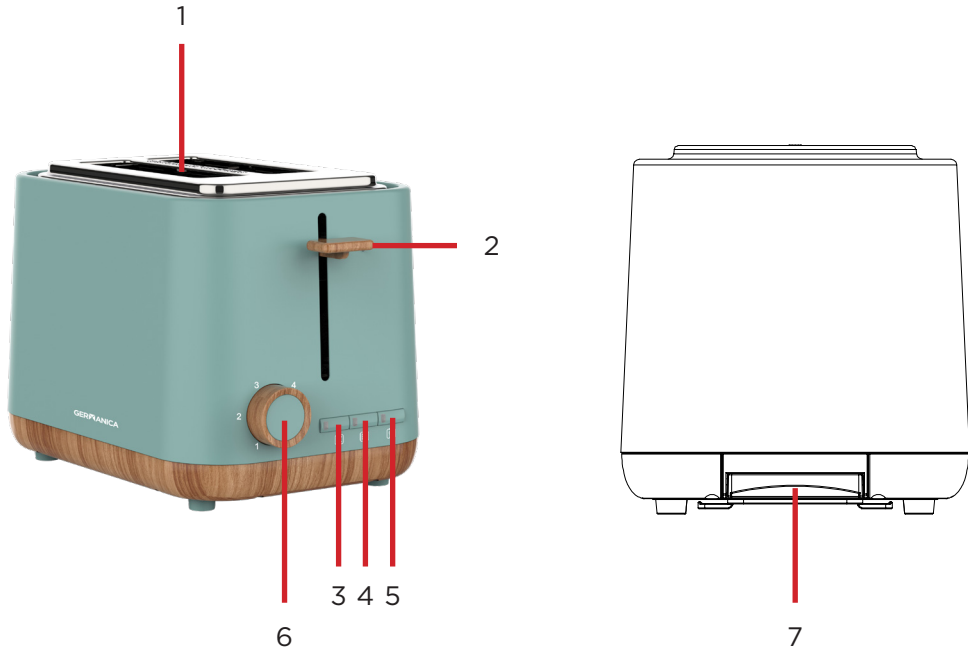

- | | |
|--------------------------|--|
| 1. Toasting Slots | 5. Reheat |
| 2. Bread Carriage Levers | 6. Electronic Variable Browning Controls |
| 3. Cancel | 7. Removable Crumb Tray |
| 4. Defrost | |

An identical set of controls are for the left-hand side toasting slots.

PREPARATION FOR USE

Carefully remove your toaster from the box. You may wish to retain the packaging for future use.

POSITIONING THE TOASTER

Position the toaster on a flat stable surface close to a mains supply socket, away from sources of heat and out of the reach of children.

INITIAL USE

NOTE: *When the toaster is plugged in and operating for the first time, there maybe a slight burning odour, as the heating elements warm up. This represents no danger to the user and does not indicate a defect in the appliance. When using for the first time, allow the toaster to heat up until the odour clears.*

It is advisable to first operate the toaster without bread.

1. Connect the toaster to the mains supply and switch on.
2. Turn the **Browning** controls to the lowest setting (1).
3. Press the loading handles down and wait for the heating elements to warm.
4. Allow the elements to heat up until the burning odour clears.
5. Press the **Cancel** buttons on the control pad to release the loading handles.



WARNING!

NEVER force bread into the toasting slots. Bread should fit easily into the toasting slots. Do not toast buttered slices of bread.

OPERATION

MAKING TOAST

1. Place four slices of bread in the toasting slots and set the **Browning** controls to the desired toasting level.
2. Press the loading handles down until they latch in the down position. The bread will now be in the lowered position in the toaster and toasting will begin. The Cancel indicator in the button will turn on (red).

NOTE: The loading handles will not latch if the unit is not connected to the mains, and may not latch if the browning controls are set to minimum.

1. Press the **Cancel** buttons at any time to stop toasting.
2. If you find the bread is not dark enough you may wish to toast the bread again. Turn the **Browning** controls to a higher setting and keep a careful eye on the toaster to ensure that the toast does not burn.
3. When toasting has finished, the loading handles will rapidly rise to the fully raised position and the Cancel indicators will turn off. The toasted bread can now be removed and the toaster is ready to restart toasting.

CONTROLS

Browning

The Browning controls vary the time for which the bread is toasted. The controls can be set from 1 to 6 with setting 1 being the shortest toasting time (lightest toast); setting 6 is the longest time (darker toast). The pointer on the browning control shows the set time.

If the toast is too dark, reduce the **Browning** controls before toasting the next slice.

Dry or thin slices will toast quicker than moist or thick slices, so use a lower browning control setting for these types of bread. When toasting four slices at the same time try to use the same size and consistency of bread in each pair of slots to achieve equal browning.

OPERATION

Cancel

If the toast starts to smoke before it has popped up, stop the toasting process by pressing the Cancel button. The Cancel indicator light will turn off.

Defrost

When using bread straight from the freezer press the loading handles down and then press the **Defrost** buttons. The Defrost indicator in the buttons will light up red. The toaster will extend the toasting time to allow the bread time to defrost.

Always keep an eye on the bread for any signs of burning and press the **Cancel** buttons if there is.

Reheat

If your toast gets cold press the loading handles down and then press the Reheat buttons. The Reheat indicator in the button will light up red.

Always keep an eye on the bread for any signs of burning and press the **Cancel** buttons if there is.

TOASTING NOTES

Toasting is a combination of cooking and drying the bread. Moisture levels differ from one bread to another which can result in varying toasting times.

For slightly dry bread, use a lower setting than normal.

For fresh bread or whole wheat, use a higher setting than normal.

Breads with very uneven surfaces will require a higher setting.

Thicker cut pieces of bread (including crumpets) will take longer to toast, sometimes significantly longer, since more moisture must be evaporated from the bread before toasting can occur. Very thick pieces may require two cycles.

When toasting raisin or other fruit breads, remove any loose raisins from the surface of the bread before placing in the toaster. This will help prevent pieces from falling into the toaster or sticking on the guard wire in the slot.

NEVER toast food with runny fillings.

Single Slice Toasting

If you are toasting a single slice of bread, set the browning control lower than normal. The toaster is designed to heat the whole toasting chamber for the two slots. By lowering the heat for a single slice, you will not over toast.

Single Slice Toasting

If you are toasting two slices of bread, use one pair of toasting slots.

CLEANING & MAINTENANCE



WARNING!

Always unplug the toaster from the mains supply and allow it to cool completely before storing or cleaning.

Cleaning

Before cleaning,

1. Unplug the toaster.
2. Wait until your toaster has cooled down completely before cleaning.
3. Clean the outer surface with a soft damp cloth only moistened with a weak detergent solution.



WARNING!

NEVER touch the internal parts of the toaster with a brush or any other implement.

Crumbs

It is important that crumbs are not allowed to build up inside the base of the toaster.

To remove crumbs from the toaster slide open the crumb trays to completely remove them. The trays are located at the back of the toaster, see right. Tip away the crumbs and then replace the trays.



WARNING!

If you drop or damage your toaster it should not be used until examined by an authorised service centre.

Servicing

When servicing is required, refer to qualified service personnel.

SPECIFICATIONS

Rating	220-240V ~ 50/60Hz
Power	685-815W

GERANICA

SUPPORT: info@ayonz.com

DISTRIBUTOR: Ayonz Pty Ltd