


GERMANICA

NUTRITION BLENDER

GER-9WB

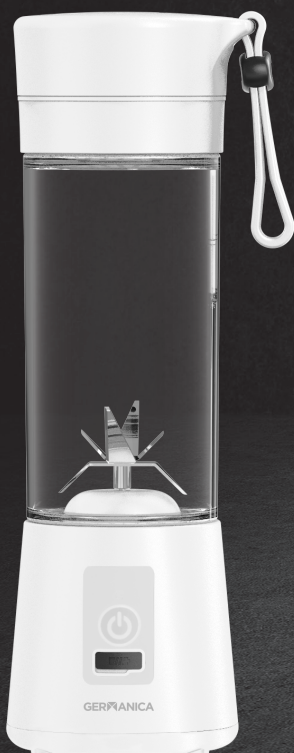

INSTRUCTION MANUAL

Please read this manual carefully before using, and keep it for future reference.

CONTENTS

General Safety	4
Before first use	6
Product Overview	7
Blades included and choosing the right one	8
Operation	9
How to use blender with the blades	9
Cleaning & Maintenance	10
Troubleshooting	11
Specification	Last Page
Customer Support	Last Page

GENERAL SAFETY

Read this manual thoroughly before you start using the blender.

Store this manual, the completed warranty card, your receipt and the product packaging.

The safety precautions instructions reduces the risk of fire, electric shock and injury when correctly complied to.

Please follow all instructions and take notice of all warnings.

IMPORTANT INFORMATION

- Do not expose this product to rain or moisture.
- Do not temper or change or modify the product in any way.
- Only use Accessories outlined and recommended by the manufacturer.

- No naked flame source, such as candles, should be placed on the product.
- This appliance is not to be used by persons (including children) with reduced physical, sensor or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
Children being supervised not to play with the appliance.
- Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.
- Always disconnect the blender from the supply if it is left unattended and before assembling, disassembling or cleaning; do not allow children to use the blender without supervision.
- The blender is only to be used with the stand provided.

CAUTION: Ensure that the blender is switched off before removing it from the stand.

GENERAL SAFETY (CONT.)

- If you notice any unusual odors or smoke around the unit, immediately turn off the device and contact the service center. Failure to do so may result in fire or electric shock.
- Please beware that Dust could accumulate over time on the unit and cause it to generate heat and or deteriorate insulation, which in turn may result in an electrical fire.
- To maintain the product do not use any chemical or cleaning agent or wet cloth, please only ensure to utilize a dry cloth to wipe it down from marks or dust and only after unplugging the product from the power socket.
- Please ensure to contact our call center for any repair or service required for the products.

Please make sure upon positioning this product, the place is:

- Not wet or damp and Well ventilated
- Away from direct sunlight or heaters.
- Protected from excessive dust or grease.
- Do not place the Product near heat sources such as radiators, stoves or other audio visual equipment that produce heat.
- Do not place small metallic objects on top of the unit.
- Do not use or store flammable or combustible materials near the unit. Doing so may result in fire or explosion. Do not place any naked flame sources, such as lit candles, cigarettes or incense sticks on top of the product.
- Switch off the appliance and disconnect from supply before changing accessories or approaching that move in use.
- Warn of potential injury from misuse.

GENERAL SAFETY (CONT.)

Before first use

- Unpack the product and accessories and ensure all parts of the product are undamaged and in good working order.
- It is strictly forbidden to turn on the power if the lid and base of the juicer cup are not tightened and assembled.
- When blender is normally opened, it is strictly forbidden to open the lid to protect personal safety
- Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach and disposed of safely.
- Ensure the product is not exposed to direct sunlight or placed near a heater or other heat source.
- If water leakage is found, please do not use it again, and repair it as soon as possible to avoid water leakage and burn the circuit board.
- During use, do not put too many fruits, vegetables and water in order to avoid negative water overflow and burn the circuit board.

WARNING

- Please do not allow children and the elderly and people with limited mobility to use alone.
- When unscrewing the container from the Body from the bowl, make sure to place the base with the blades in a safe area, out of reach from person(s) or children.
The blades are sharp and will cause harm if not handled carefully.
- The Body of product is separate from the bowl with blades.





**NEVER RUN THE APPLIANCE FOR MORE THAN 30 SECONDS
BECAUSE IT CAN CAUSE PERMANENT DAMAGE TO THE MOTOR.
ALWAYS STOP FOR MINIMUM 2 MINUTES AFTER 30 SECONDS
OF USE.**

CAUTION

**THIS UNIT IS FULLY CHARGED WHEN USING OR
OPENING FROM PACKAGING FOR THE FIRST TIME**

PRODUCT OVERVIEW

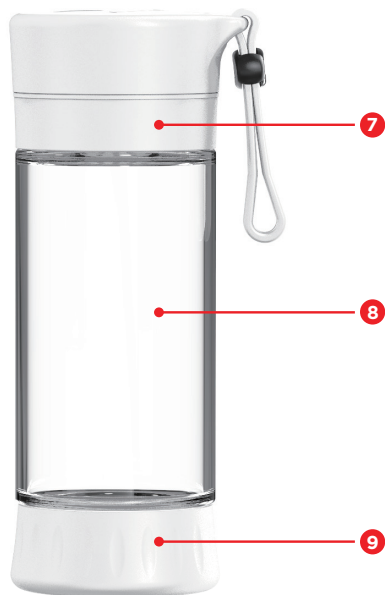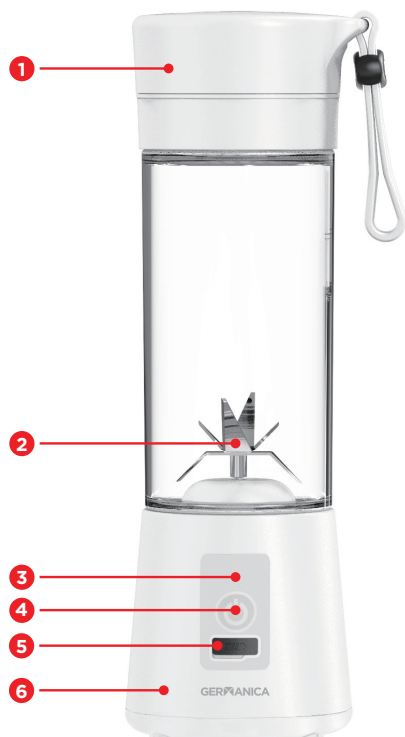

1. Travel Lid
2. Stainless Steel Cross Blade
3. Indicate Light
4. ON/OFF Switch
5. Charging Port

6. Power Base
7. Strainer
8. 520ml Blending Cup
9. Storage Lid

THIS PRODUCT OR ITS ACCSESORIES ARE NOT DISHWASHER SAFE. PLACING IN DISHWASHER WILL DAMAGE THE UNIT OR ITS ACCSSORIES.

OPERATION

1. One Click to turn on, and one click again to turn off.
2. **Charge for more than 3 hours before first use.**
3. The blue LED flashes 5 times after the host and the cup body are tightened, indicating that it can be turned on normally.
4. Counting 1-20 when starting up, running time 20 seconds.
5. When the empty cup is turned on, it will stop for 5 seconds and enter the idling protection mode.
6. One click can't boot, red and blue LED flash alternately, means no start switch induction, in safety protection mode.
7. Click to start but the red light on, means the voltage is too low and enter the protection mode.
8. After booting, the red and blue LEDs flash alternately and enter the overload protection mode
9. Displays red when charging, and blue when fully charged.

OPERATION (CONT.)

1. Remove fruit and vegetable skins, hard shells and cores first. Then cut into about 1.5*1.5cm square shape

The correct starting method is to start the juicer cup upside down.

2. Put in fruits and vegetables, about 60% of the cup body,
The liquid level after adding water is 80% of the cup body
3. The correct starting method is to start the juicer cup upside down
4. Place the juicer cup diagonally or upright after turning on the machine.

OVERLOAD PROTECTION

- **Can't turn on when clicking, red and blue alternately display**

The juice cup body and the host are not in position, align the two small circle center points of the boot logo, and the blue flashes 5 times to boot.

- **Click to turn on, the red light on, means the battery is too low to start.**

- **Shut down 5 seconds after starting**

The empty cup or the added fruits and vegetables and water are too little below the normal liquid level. Add proper amount of water or fruits and vegetables to maintain normal liquid level

- **Red and blue light flashing alternately after power on**

Enter the overload protection mode.

Open the cup and remove the hard objects stuck on the blade, or if the amount of liquid exceeds the safety line, pour out a little from the cup.

- **No any display when charging**

Battery or circuit failure should replace the battery pack or return to the factory for repair.

- **Water leakage**

The silicone ring has foreign matter or the assembly is not in place, please clean the silicone ring or reassemble the silicone ring.

SPECIFICATIONS

Input (Charging)	DC 5V, 1A
Battery SPEC.	DC 7.4V, 2000mAh*2
Weights	Net: 0.52 kg / Gross: 0.65 kg

GERANICA

CUSTOMER HELPLINE:

info@ayonz.com

DISTRIBUTED BY:

Ayonz Pty Ltd