

GERANICA

7.7L DIGITAL AIR FRYER

GAF8PLUS



INSTRUCTION MANUAL

Please read this manual carefully before using, and keep it for future reference.

CONTENTS

General Safety	4
Product Overview	9
Control Panel	10
Programs/Functions	11
Before First Use	12
Operation	
First Time Clean	14
How to use	14
Cleaning and Maintenance	16
FAQs	17
Specifications	18
Customer Helpline	Last Page

GENERAL SAFETY

IMPORTANT INFORMATION

Read this manual thoroughly before you start using the Air Fryer. The safety precautions instructions reduces the risk of fire, electric shock and injury when correctly complied to. Please follow all instructions and take notice of all warnings.



The cover (or back) of the unit should not be removed to prevent risk of electric shock. This unit must be serviced by a qualified service personnel only.



The lightning flash with symbol within the triangle is intended to warn you of a non-insulated dangerous voltage in the product's enclosure that could be of sufficient magnitude to generate a risk of electric shock to persons.



The exclamation point within the triangle is intended to warn you to the presence of important operating and maintenance instructions in the documents included with the product.

IMPORTANT INFORMATION

The lightning flash symbol within the triangle is intended to warn you of non-insulated dangerous voltage the product's enclosure that could be of sufficient magnitude to generate a risk of electric shock to persons.

- Only using furniture that can safely support the Products.
- Ensure the Product is not overhanging the edge of the supporting furniture.
- Do not place the product on a high furniture without securing both the furniture and the product to a stable support.
- Do not place the product on cloth or other conductive materials.
- Warn children of the dangers of climbing on furniture to reach the air fryer or its controls and to call for an adult to assist.

GENERAL SAFETY (Cont.)

- When handling Air fryer, make sure to use handle to remove basket after using the air fryer. Other surfaces may be hot.
- The outside of the air fryer is hot during and after use.
- Always use heat-resistant gloves, pads, or oven mitts when handling hot materials, and when placing items in or removing items from the air fryer, including trays, racks, accessories, or containers.
- When the air fryer is not in use, and before cleaning, turn off the appliance, then unplug from outlet. Allow to cool completely before putting on or taking off parts.
- Do not immerse the housing, cord, or plug in water or liquid.
- Closely supervise children near the air fryer.
- Do not use your air fryer if it is damaged, not working, or if the cord or plug is damaged. Contact Customer Support info@ayonz.com
- Do not use third-party replacement parts or accessories, as this may cause injuries.
- Do not use outdoors.
- Be extremely cautious when removing the basket if it contains hot oil, grease, or other hot liquids.
- Do not clean with metal scouring pads. Metal fragments can break off the pad and touch electrical parts, creating a risk of electric shock.
- Clean the basket after using and after allowing it to cool. Accumulated grease and crumbs can overheat and catch fire.
- Do not store anything on top of your air fryer when in operation. Do not store anything inside your air fryer other than recommended accessories.
- Do not operate with a separate remote control system (i.e. Timers or Wi-Fi Smart Power Plugs).
- Only use as directed in this manual.
- Not for commercial use. Household use only.

RECOMMENDED:

Air Fryers should be placed and used on a “stable, horizontal, flat and heat-resistant” surface. Must be placed on an insulated heat pad.

We recommend you purchase a heat insulation pad to be placed under the air fryer, as the heat generated from the air fryer may cause damage to the surface overtime.

GENERAL SAFETY (Cont.)

WHILE COOKING

- Do not place oversized foods or metal utensils (except for Germanica accessories) into your air fryer.
- Do not place paper, cardboard, or nonheat-resistant plastic into your air fryer, or any materials which may catch fire or melt.
- To avoid overheating, do not use metal foil in the air fryer unless directed. Use extreme caution when using foil, and always fit foil as securely as possible. If the foil contacts the product heating elements, this can cause overheating and risk of fire.
- Never put baking or parchment paper into the air fryer. Air circulation can cause paper to move and touch heating elements.
- Always use heat-safe containers. Be extremely cautious if using containers that aren't metal or glass.
- Keep your air fryer away from flammable materials (curtains, tablecloths, walls, etc). Use on a flat, stable, heat-resistant surface away from heat sources or liquids.
- Immediately turn off and unplug your air fryer if you see dark smoke coming out.
Food is burning. Wait for smoke to clear before taking out basket.

GENERAL SAFETY (Cont.)

ELECTRICAL SAFETY AND POWER CORD HANDLING

- **Voltage:** Make sure that your outlet voltage and circuit frequency correspond to the voltage stated on the appliance rating plate.
- **Power outlet:** Connect the appliance to a properly earthed power outlet, which must be easily accessible so that you can unplug it if necessary.
- **Power cord:** Do not kink or damage the power cord. Do not let it hang over the edge of a table or benchtop, and do not let it touch hot or sharp surfaces. Make sure the cord does not run under the Air Fryer.
- **Electrical safety:** Do not insert any objects into the appliance.

WARNING!

- **Protect from moisture:** To reduce the risk of electrocution and other electrical hazards, do not immerse the cord or plug in water, do not spill liquids into the product, and do not operate it with wet hands.
- **Damage:** Do not use this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped. If damaged, please contact our support centre line - info@ayonz.com
- **Damaged cord:** If the appliance and/or its cord are damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard. Do not attempt to repair, disassemble, or modify the appliance. There are no user-serviceable parts inside this unit.
- **Disconnection:** Switch the appliance off and unplug it from the power supply after you have finished using it and before cleaning, servicing, maintenance, or moving the appliance. DO NOT pull the cord when disconnecting, grip the plug and pull it gently out of the outlet.

USAGE RESTRICTIONS AND CONDITIONS

- This appliance is intended for indoor domestic use only. It is not suitable for commercial, industrial or laboratory use.
- Do not use the appliance outdoors.
- The appliance is not intended to be operated by means of an external timer.


GENERAL SAFETY (Cont.)

- Do not use the appliance for anything other than its intended purpose. Drying of food or clothing and heating of warming pads and similar items may lead to risk of injury, ignition or fire.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction on the use of the appliance by a person responsible for their safety.
- Supervise children to ensure they do not play with the appliance. Do not allow children to clean the Air Fryer or perform user maintenance.
- Maintain the air fryer in a clean condition to avoid deterioration, which could affect its working life and result in a hazard risk.
- We accept no liability for any eventual damages due to improper use, incorrect handling or non compliance with these instructions.

This appliance is intended to be used in household and similar applications such as:


- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential environments;
- bed and breakfast type environments.

PRODUCT OVERVIEW

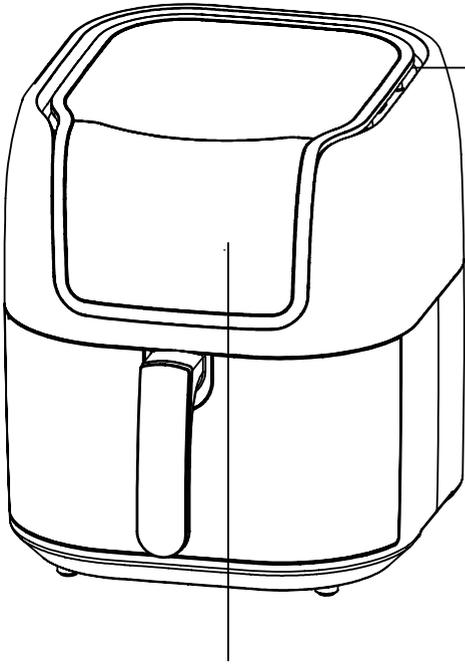


AIR INLET


**CONTROL
PANEL DISPLAY**

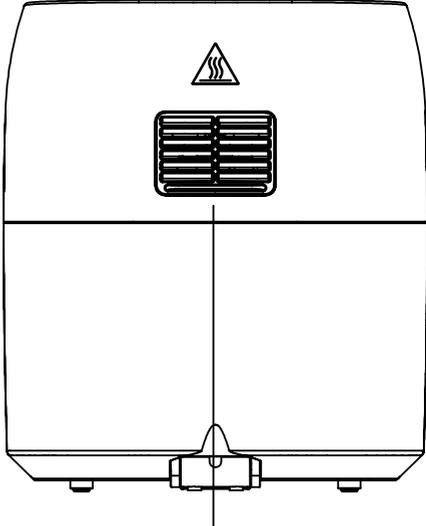

AIR OUTLET

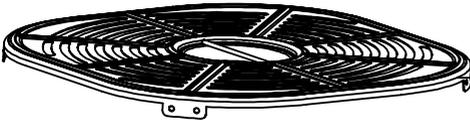

GRILL

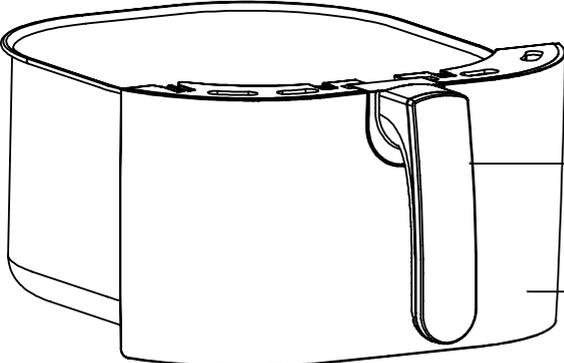

HANDLE

BASKET

PRODUCT OVERVIEW (Cont.)



POWER/PAUSE/START - Press to turn on.
Press during program to pause/start cooking process.
Press and hold to turn off



KEEP WARM - Press this button to set your food to stay warm.





TEMPERATURE - Use the up and down arrows to adjust the temperature before or during the cooking process.



TIMER - Use the up and down arrows to adjust the cook time in any function before or during the cooking process.

PRODUCT OVERVIEW (Cont.)

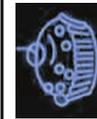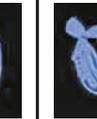ICON	MENU	Min-Max (g) Food amount	Time (Mins)	Temp (°C)	Need to Turn over?	INFO
	FRIES	600-1000	18-25	200	YES	
	RIBS	350-450	15-20	180	YES	
	PRAWNS	150-250	15-20	160	YES	
	CAKE	550-650 8-10cups	35-45	160	YES	
	DRUM- STICKS	700-900 10-13PCS	20-25	180	YES	Adding 1/2 spoon of oil
	STEAK	450 3-5pcs	15-25	160	YES	Adding 1/2 spoon of oil
	FISH	200-300	15-20	180	YES	

BEFORE FIRST USE

Before installing your appliance, read all safety instructions in this manual, especially the sections on electrical safety and installation.

UNPACKING

- When unpacking the appliance, be sure to keep all the packaging materials until you have made sure your new appliance is undamaged and in good working order. This product has been packaged to protect itself against transportation.
- Be sure to remove all packaging materials around the appliance and that the plastic film used is also removed.
- **CAUTION:** Plastic wrapping can be a suffocation hazard for babies and young children. Make sure all packaging materials are out of reach for children and that they are disposed of correctly.

INSTALLATION

- Place the Air Fryer on a flat, stable surface that can support the weight of the air fryer. Do not place the Air Fryer where heat, moisture or high humidity are generated, or near combustible materials.
- The Air Fryer is intended to be used freestanding and must not to be placed in a cabinet.
- The Air Fryer must have plenty of airflow. Allow 30cm of space above the product, 10cm at the back and 5cm on both sides. Do not cover/block any openings on the appliance. Do not remove the feet.
- The power cord must not run under the air fryer or over any hot or sharp surface.
- Make sure that the power socket is easily accessible so it can be unplugged in an emergency.

RECOMMENDED:

Air Fryers should be placed and used on a “stable, horizontal, flat and heat-resistant” surface. Must be placed on an insulated heat pad. We recommend you purchase a heat insulation pad to be placed under the air fryer, as the heat generated from the airfryer may cause damage to the surface overtime.

BEFORE FIRST USE (Cont.)

IMPORTANT ADVICE

The plug must be connected to an appropriate outlet that is installed and earthed in accordance with local standards and requirements. If unsure, consult an electrician or a service representative. Do not, under any circumstances, cut or remove the third (grounding) prong from the power plug.

OPERATION

FIRST TIME CLEAN

Wash the baskets and crisper plates in hot, soapy water, then rinse and dry thoroughly. The crisper plates and baskets are the ONLY dishwasher-safe parts. NEVER CLEAN THE MAIN UNIT IN DISHWASHER.

HOW TO USE

1. Plug in the Air fryer into the wall power socket.
2. Using the big grey front handle, Pull out the basket by the grey handle.
3. Place the food you desire to cook inside the basket on top of the grill plate inside and insert it back into the Air Fryer.
4. Press the  **ON/START/PAUSE** button to turn on the air fryer.
5. The digital control panel will illuminate.
6. The Default settings is 185°C and 15 Mins run time.

1. MANUAL



You can adjust the TEMPATURE by pressing the **UP/DOWN** arrows.



You can adjust the TIME by pressing the **UP/DOWN** arrows.

OR -

AUTOMATIC PROGRAMS - REFER TO PAGE 11

Match the food you want to cook my selecting the icons shown on the digital control panel:



CHIPS



CHICKEN



PRAWNS



CAKE



STEAK



FISH



RIBS



KEEP WARM

OPERATION (Cont.)

NOTE: All food cooked within Air Fryer requires being turned over in order to cook evenly on all sides.

- Pull out the tray by the grey front handle, turn the food and be sure to insert basket/tray back into the air fryer.

CAUTION: Only hold the grey handle, other parts of air fryer will be hot.

7. Once Air fryer has completed the cooking process, it will turn off and beep 5 times to notify you. Take the basket out by holding the handle.
8. When you slide basket out, be careful with handling (keep upright) as you do not want oil or food to spill onto the floor or potentially on yourself and cause burns.
9. To remove contents from inside MAKE SURE to use tongs to remove food contents inside the basket.

CAUTION - DO NOT TURN BASKET ON AN ANGLE OR UPSIDE DOWN, REMAINING OIL COLLECTED IN THE BASKET CAN LEAK ONTO THE FOODS COOKED OR ON YOU WHICH WILL CAUSE BURNS.

RECOMMENDED:

Air Fryers should be placed and used on a “stable, horizontal, flat and heat-resistant” surface. Must be placed on an insulated heat pad.

We recommend you purchase a heat insulation pad to be placed under the air fryer, as the heat generated from the air fryer may cause damage to the surface overtime.

CLEANING AND MAINTENANCE

NOTE:

- Do not use abrasive cleaners, metal scouring pads, or metal utensils on any part of the air fryer, including accessories. These will scratch or damage their surfaces.
 - This air fryer contains no user-serviceable parts. Any repairs should be performed by an authorized service representative.
1. Before cleaning, turn off and unplug the air fryer, and allow it to cool completely. Take out the basket by the handle for faster cooling.
 2. Apply non-abrasive liquid cleanser or a mild spray solution to a soft, damp cloth or sponge (not the product surface) and wipe all parts of the product. Do not use a dry cloth on the display screen, or it may be scratched.
 4. Let all surfaces dry completely before plugging in or turning on the product.

NOTE: After each use, wait for product to completely cool down, once cooled remove the grill plate and wash. Then empty the inside of basket.

FAQS

If experiencing issues with your air fryer and isn't operating correctly please check the following pages for solutions to the problems. If none of the solutions offered help solve the problem with your appliance then please contact our call centre on info@ayonz.com.

DO NOT ATTEMPT TO REPAIR THE APPLIANCE YOURSELF.

PROBLEM	POSSIBLE SOLUTION
THE AIR FRYER WILL NOT TURN ON.	Make sure the air fryer is plugged in.
FOODS ARE NOT COMPLETELY COOKED.	Increase cooking temperature or time, Make sure to turn over so all sides cook evenly.
FOODS ARE COOKED UNEVENLY.	Make sure to turn over during cooking process so all sides are cooked evenly.
	Make sure food items are not too closely packed inside the basket.
WHITE SMOKE IS COMING OUT OF THE AIR FRYER.	Excess oil or fatty foods may produce white smoke. Make sure the inside of the Air Fryer is cleaned properly and not greasy.
DARK SMOKE IS COMING OUT OF THE AIR FRYER.	Immediately press and hold ON/PAUSE/START button and unplug your air fryer. Food is burning. Wait for smoke to clear before taking out basket.

SPECIFICATIONS

Power Supply	220-240V ~ 50-60Hz
Rated Power	1800W
Dimensions	305 (w) x 390 (d) x 353 (h) mm
Weight	Net: 5.3 kg / Gross: 6 kg

GER ANICA

CUSTOMER HELPLINE:

info@ayonz.com

DISTRIBUTED BY:

Ayonz Pty Ltd